

DN40-DN200

Application

Proportional 0-10V or 3-position modulating control of OPTIMA Compact valves in heating, ventilating and air conditioning systems.

Due to the self adaption of stroke length, the actuator provides full utilization of the OPTIMA Compact valve modulation.

Supplied with the OPTIMA Compact PICV valves (DN40-DN200).



Features

- Self calibrating stroke up to 52 mm
- 3-position or 0-10 V modulating control within the same actuator
- Voltage control signal range can be selected by use of dip switches.
- Linear or EQ% characterization available on the same actuator
- Small outer dimensions
- Removable cable
- Auto zero detection
- Feedback signal
- IP 54 protection
- The electronic circuit of the actuator ensures that the running time is the same, regardless of the stroke of the valve
- · Manual operation handle on the actuator

Approvals

- Conforms to: EMC directive 2004/108/EC
- Low voltage directive 2006/95/EC





DN40-DN200

Technical Data

Characteristics: Motoric, modulating, normally closed

Protection class: IP 54 to EN 60529

Frequency AC: 50/60 Hz

Control signal: 0-10V DC or 3 position **Control signal impedance:** Min. 100 kOhm (0-10V)

Actuating force: 400 N - DN40-DN50 (Threaded)

800 N - DN50-DN125 (Flanged) 1500 N - DN150-DN200 (Flanged)

Stroke max: 32mm DN40-DN50 (Threaded)

52mm DN50-DN200 (Flanged)

Running time: DN40-DN50 60 s (0-10V)

60 s or 300 s, selectable (3-pos)

Running time: DN50-DN200 30 s (0-10V)

60 s or 300 s, selectable (3-pos)

Ambient operating conditions: -10°C to 50°C

Manual operation: Manual handle

Cable: Not included


Weight: 1.80 kg


Types and Operation Data

Type [Item no.]	Valve Dimension	Function	Supply voltage	Power Consumption
Type-01 [53-1296]	DN40-DN50 (Threaded) DN50 (Ultra-series)	0-10 V / 3-pos	24 V AC +/-25% 24V DC +/- 10%	6 VA (*30VA)
Type-02 [53-1297]	DN65 - DN125 (Ultra-series) DN50 - DN125 (Standard-series)	0-10 V / 3-pos	24 V AC +/-25% 24V DC +/- 10%	15 VA (*50VA)
Type-03 [53-1298]	DN150-DN200 (Standard-series)	0-10 V / 3-pos	24 V AC +/-25% 24V DC +/- 10%	24 VA (*50VA)

^{*)} Max consumption - for transformer sizing

Dimensions

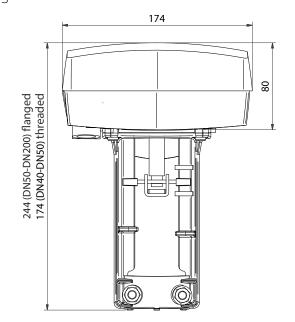


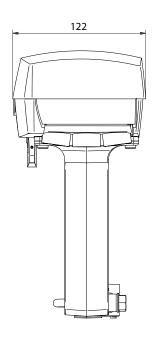



DN40-DN200

Actuator Settings

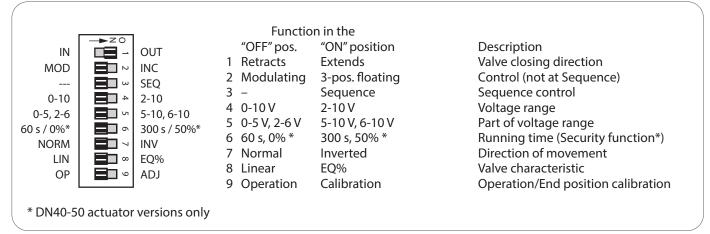

There are nine switches in a row on the circuit board. On delivery ('Factory'), all switches are pre-set as above.

1 Valve Closing Direction — IN / OUT

IN direction of movement is used when the screw of the actuator moves inwards to close the valve. OUT direction of movement is used when the screw of the actuator moves outwards to close the valve.

For OPTIMA Compact valves, ensure this switch is always 'ON'

2 Control signal — MOD / INC

Actuator can either be controlled by a variable direct voltage, known as a modulating signal (MOD), or by a 3-pos. floating signal (INC).

3 Sequence or parallel control — -- - / SEQ

With sequence (or parallel) control (SEQ), two actuators/valves can be controlled by only one control signal.

For each of these you can choose which part of the voltage range to use, the upper one, $5-10\,V$ ($6-10\,V$) or the lower one, $0-5\,V$ ($2-6\,V$).

If the switch NORM / INV is in the NORM position, the higher voltage corresponds to 100% flow and the lower one to 0%. With NORM / INV in the INV position you will get the opposite function.

Note! If sequence or parallel control is not used, the switch ---/ SEQ must be in the OFF position, as the switch MOD / INC is not valid during sequence or parallel control.

4 Voltage range — 0-10 / 2-10

You can choose whether to use the control signal voltage range 0-10 V or 2-10 V.

5 Part of voltage range — 0-5, 2-6 / 5-10. 6-10

You can choose which part of a voltage range to use, the lower one 0-5 V (2-6 V) or the upper one 5-10 V (6-10 V).

If the switch is in the NORM position, the higher voltage corresponds to 100% flow and the lower one to 0%. To achieve the opposite function, the switch should be put in its INV position.

6a Running time — 60 s / 300 s

With 3-point floating control, you can choose a running time between 60 s or 300 s.

With modulating control, the running time is always:

60 s (DN40-DN50 threaded)

15 s (DN50-DN80)

30 s (DN100-DN200)

6b Security function 0% / 50% (DN40-50 actuator versions only)

At 2–10 V control signal you can select which security function you want the actuator to have.

If the actuator is used for heating control and switch 6 is ON (50%), the actuator will open the valve halfway if the control signal disappears, e.g. if the X1 connection is unplugged.

If, instead, you want the valve closed, set switch 6 to OFF (0%). Note! The direction of movement is also significant. See the following description.

7 Direction of movement — NORM / INV

Actuators direction of movement according to the control signal. In normal 'NORM' mode the actuator directly follows the control signal and closes the valve downwards against a 0V control signal.

In inverse 'INV' mode, the actuator reverses the direction of travel against the control signal and will open the valve upwards against a 0V control signal.

8 Linearization — LIN /EQ%

The total valve characteristics can be modified from linear to EO%.

9 End position adjustment — OP / ADJ


This switch is only used to calibrate the end positions when the actuator is commissioned. Momentarily put the switch in the ON position. The actuator will automatically find the end positions of the valve. For normal operation the switch must be OFF



DN40-DN200

Connection Diagrams


G, G0 = Max 100 m 1.5 mm² (AWG 15) X1, MX, Y, VH, VC = Max 200 m 0,5 mm² (AWG 20)

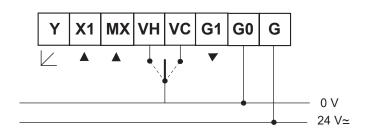

Terminal	Function	
Υ	Feedback signal 0-100% (2-10V)	
X1	Input signal 0-10V	
MX	Neutral	
VH	Increase (3-pos. control)	
VC	Decrease (3-pos. control)	
G1	Short circuit-safe supply 16±0.3 VDC, 25mA	
G0	System neutral 0 V	
G	System potential 24 V AC/DC	


Wiring examples


0-10V, 2-10V control signal

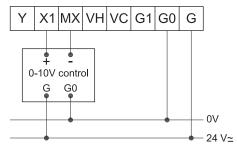

4 wires to the actuator

3-pos control signal

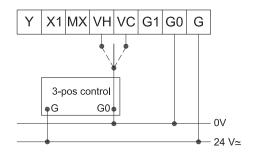


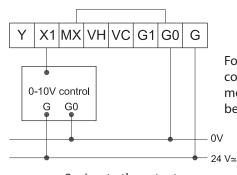

For 0-10V control with 3 wire connection, it is needed to mount an internal wiring between MX and G0

3 wires to the actuator


4-20 mA control signal

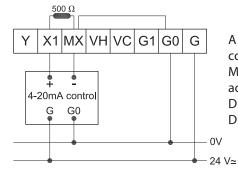

A 500 Ω resistor must be connected between X1 and MX. (Not delivered with the actuator)

Dip switch 2 must be OFF and Dip switch 4 must be ON

Feedback signal (2-10V)

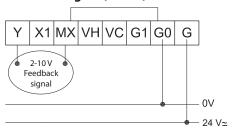

Frese A/S assumes no responsibility for errors, if any, in catalogues, brochures, and other printed matter. Frese A/S reserves the right to modify its products without prior notice, including already ordered products, if this does not alter existing specifications. All registered trademarks in this material are the property of Frese A/S. All rights reserved.

Vexve Denmark | Frese A/S Tel: +45 58 56 00 00